



# PARTS BREAKDOWN GENERATOR

MODEL:BE3500PS



**BEPOWEREQUIPMENT**


**.COM**



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## CYLINDER HEAD AND COVER

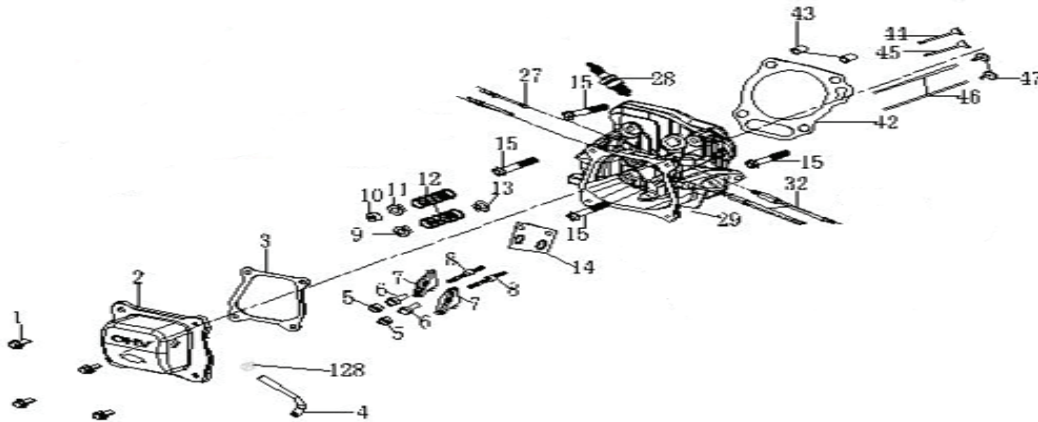

REF #	DESCRIPTION	QTY	BE PART #
2	CYLINDER HEAD COVER	1	85.573.000
3	SEALING GASKET	1	
42	CYLINDER HEAD SEALING GASKET	1	85.573.002

## CRANKCASE

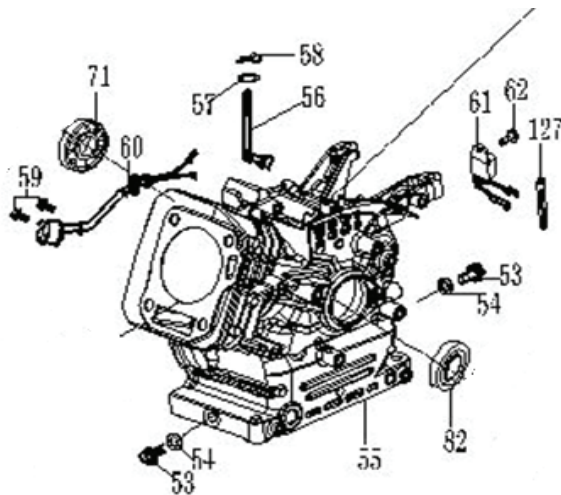


REF #	DESCRIPTION	QTY	BE PART #
60	OIL SENSOR	1	85.573.003
61	OIL ALERT	2	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## CRANKCASE COVER

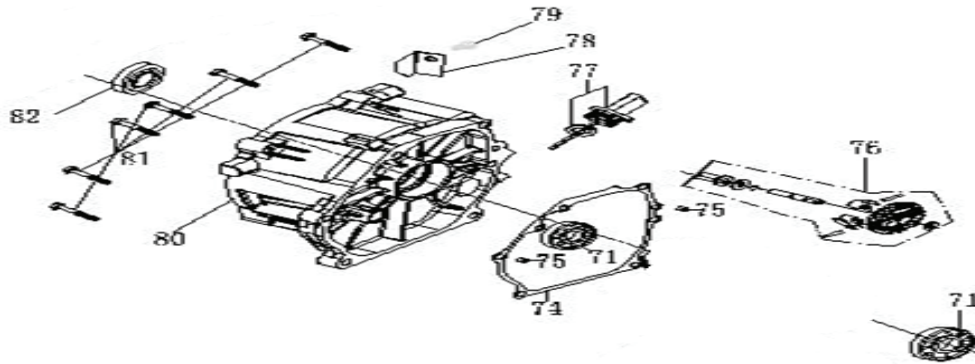

REF #	DESCRIPTION	QTY	BE PART #
74	CRANKCASE COVER SEAL RING	1	85.573.004
82	OIL SEAL	2	
77	OIL LEVEL GAUGE	1	85.573.005

## PISTON/CONNECTING ROD

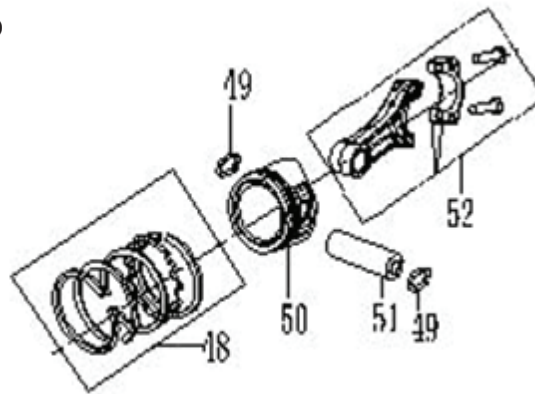


REF #	DESCRIPTION	QTY	BE PART #
48	PISTON RINGS SET	1	85.573.006
49	PISTON PIN	2	85.573.007
51	PISTON PIN	1	
50	PISTON	1	85.573.008
52	CONNECTING ROD ASSEMBLY	1	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## PISTON AND CONNECTING ROD

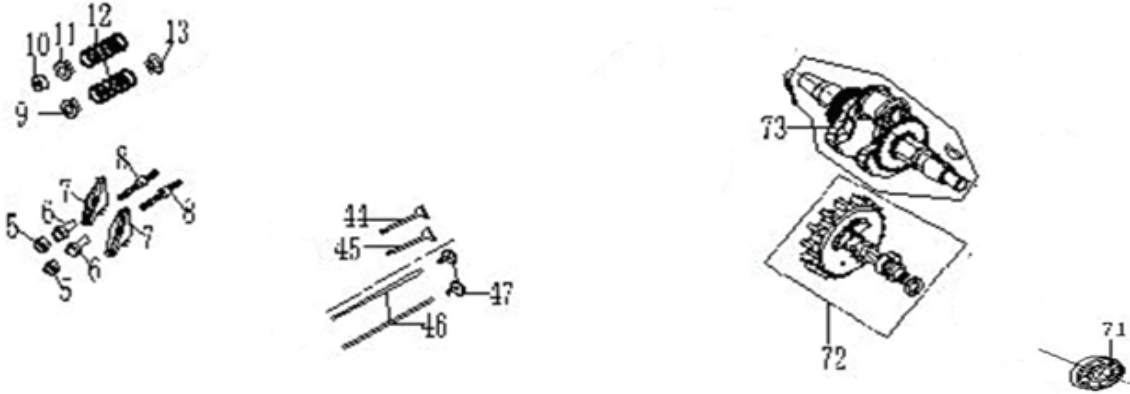

REF #	DESCRIPTION	QTY	BE PART #
5	ROCKSHAFT RATING NUT	2	85.573.011
6	ROCKSHAFT	2	
7	VALVE ROCKER	2	
8	ROCKSHAFT BOLT	2	
9	INTAKE VALVE SPRING SEAT	1	
10	EXHAUST VALVE ROTOR	1	
11	EXHAUST VALVE SPRING SEAT	1	
12	VALVE SPRING	2	
13	OIL DRIP PAN	1	
44	EXHAUST VALVE	1	
45	INTAKE VALVE	1	
46	VALVE PUSH ROD	2	
47	VALVE LIFTER	2	

## STARTER/RECOIL

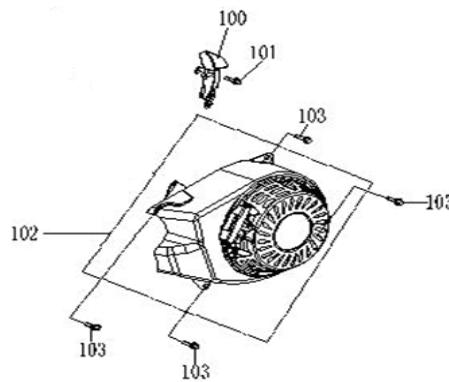


REF #	DESCRIPTION	QTY	BE PART #
100	SIDE WIND SHIELD	1	85.573.012
101	FLANGE BOLT	1	
102	RECOIL STARTER ASSEMBLY	1	
103	FLANGE BOLT	4	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## CARBURETOR ASSEMBLY

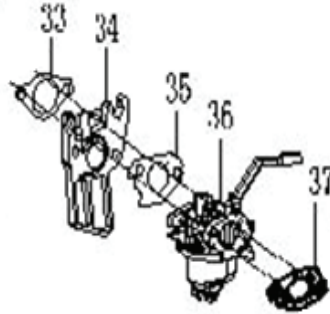

REF #	DESCRIPTION	QTY	BE PART #
33	INTAKE GASKET	1	85.573.013
34	LINK BLOCK	1	
35	GASKET	1	
36	CARBURETOR ASSEMBLY	1	
37	AIR FILTER GASKET	1	

## AIR FILTER

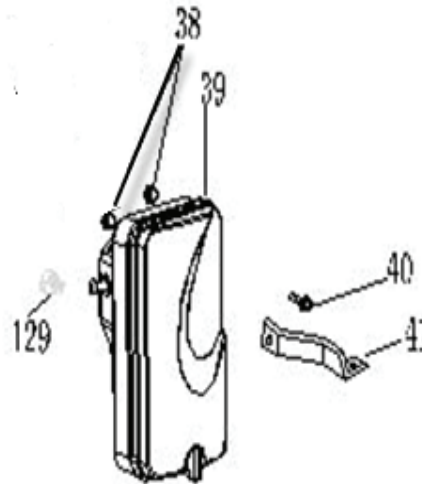


REF #	DESCRIPTION	QTY	BE PART #
38	FLANGE NUT	2	85.573.0014
39	AIR FILTER ASSEMBLY	1	
40	FLANGE BOLT	1	
41	AIR FILTER BRACKET	1	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## MUFFLER ASSEMBLY

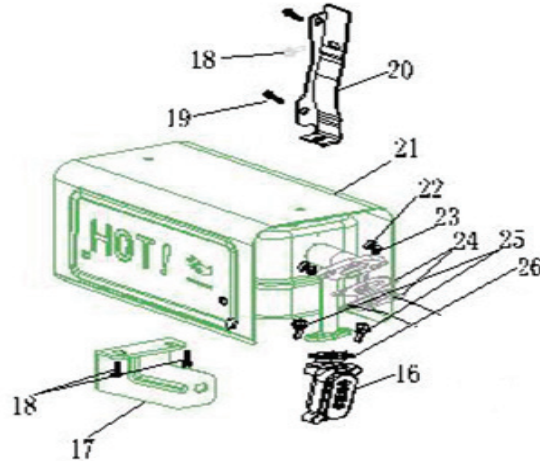

REF #	DESCRIPTION	QTY	BE PART #
16-26	COMPLETE MUFFLER ASSEMBLY	1	85.573.015

## FUEL TANK

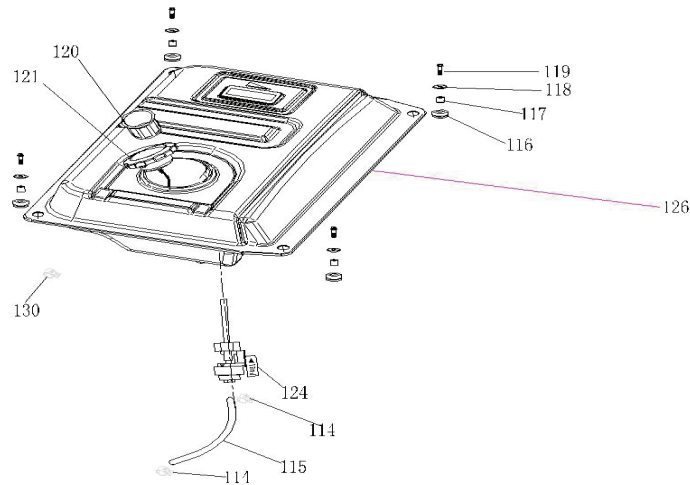


REF #	DESCRIPTION	QTY	BE PART #
114	CLAMP	2	85.573.016
115	FUEL HOSE	1	
124	FUEL VALVE	1	
120	FUEL FILTER SCREEN	1	85.573.017
121	FUEL CAP	1	85.573.018
126	FUEL TANK	1	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## FUEL TANK

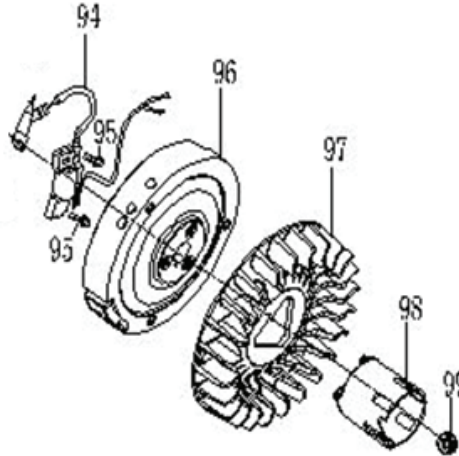

REF #	DESCRIPTION	QTY	BE PART #
94	IGNITION COIL ASSEMBLY	1	85.573.019
96	FLYWHEEL	1	85.573.020
97	COOLING FAN	1	85.573.021

## CONTROL ASSEMBLY

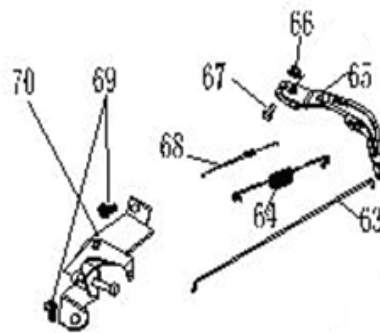


REF #	DESCRIPTION	QTY	BE PART #
63	SPEED PULL ROD	1	85.573.022
64	FINE SPRING	1	
65	SPEED REGULATING ARM	1	
66	FLANGE NUT	1	
67	GOVERNOR BOLT	1	
68	RESET SPRING	1	
69	FLANGE BOLT	2	
70	SPEED SETTING CONTROL ASSEMBLY	1	



# PARTS BREAKDOWN GENERATOR


MODEL:BE3500PS

## ROTOR/STATOR

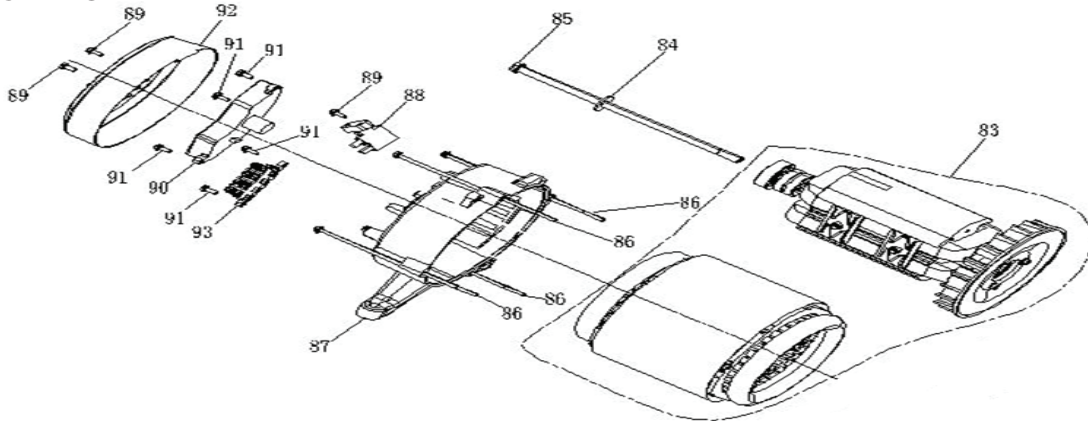

REF #	DESCRIPTION	QTY	BE PART #
83	ALTERNATOR ASSEMBLY	1	85.573.023
87	ALTERNATOR BRACKET	1	85.573.024

## FRAME

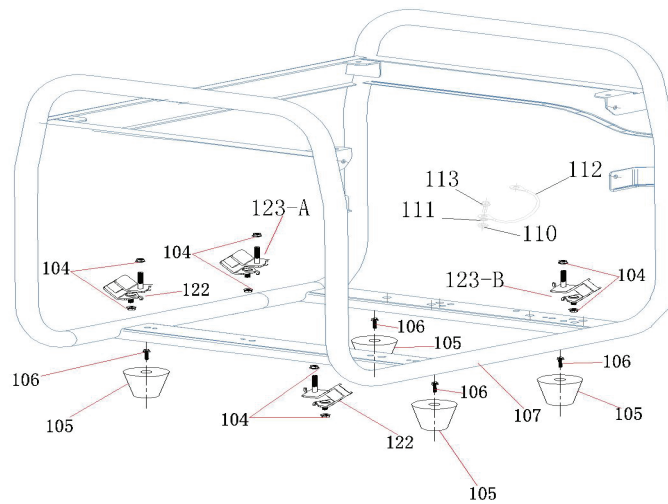


REF #	DESCRIPTION	QTY	BE PART #
107	FRAME	1	85.573.025
104	VIBRATION BLOCK MOUNTS	4	85.573.032
122	VIBRATION BLOCK	2	
123	VIBRATION BLOCK	2	
105	RUBBER FOOT	4	85.573.031
106	RUBBER FOOT BOLT	4	



# PARTS BREAKDOWN GENERATOR

MODEL:BE3500PS

## FRAME

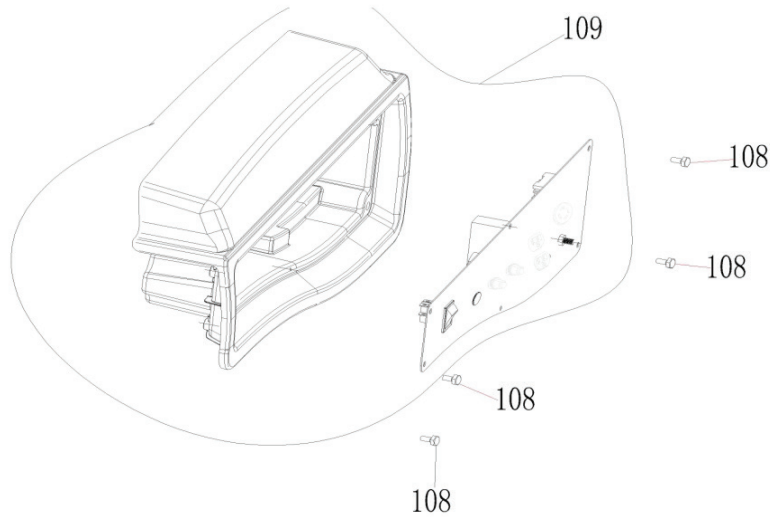

REF #	DESCRIPTION	QTY	BE PART #
108	FLANGE BOLT	4	85.573.027
109	CONTROL PANEL ASSEMBLY	1	

# BE

**POWER EQUIPMENT**

---

If you need technical assistance call:

**1-866-850-6662**

**(8:00am - 4:30pm PST, Mon - Fri)**