



PARTS BREAKDOWN GENERATOR

MODEL:BE3800



BEPOWEREQUIPMENT


.COM



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

CRANKCASE COVER

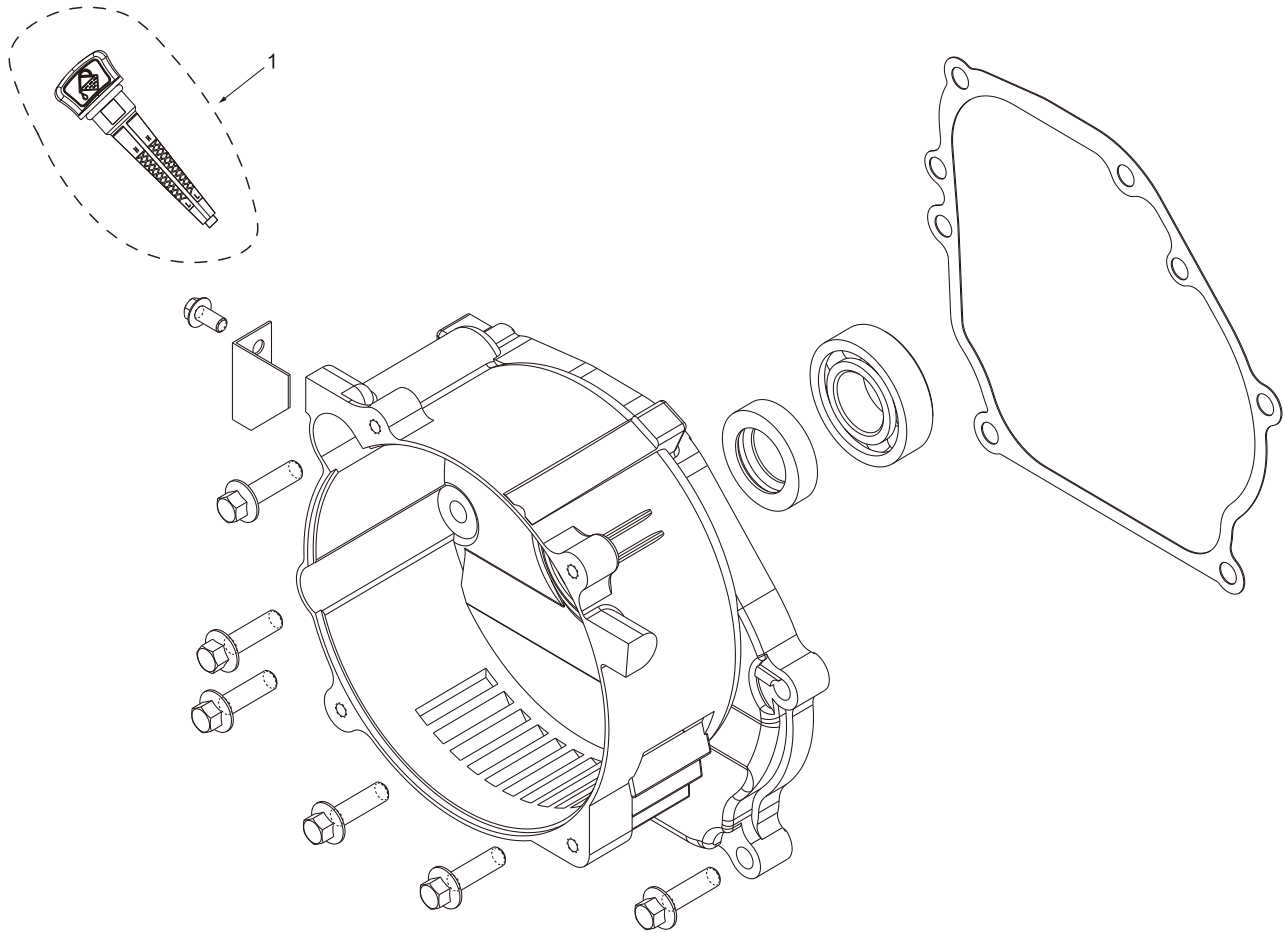


REF #	DESCRIPTION	QTY	BE PART #
1	MAGNETIC DIPSTICK	1	85.561.000



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

ENGINE STARTER

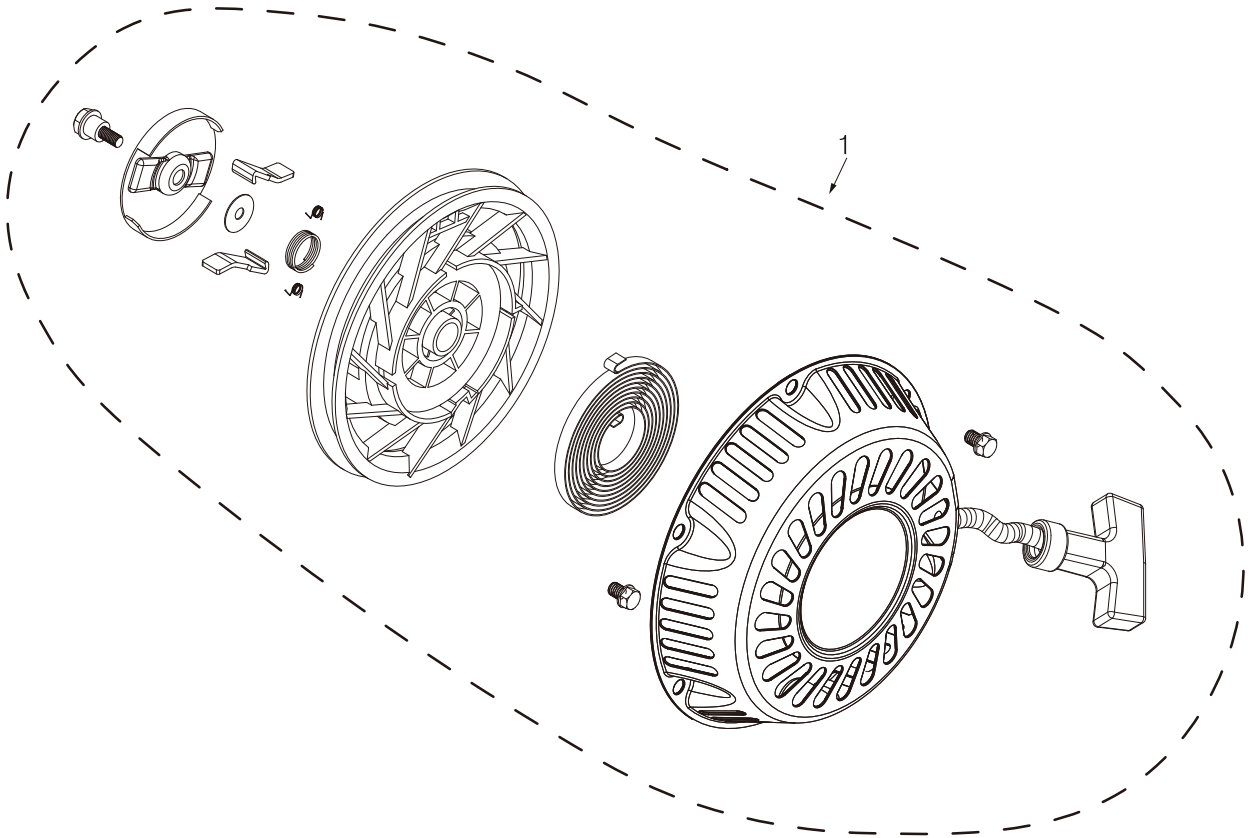


REF #	DESCRIPTION	QTY	BE PART #
1	RECOIL ASSEMBLY	1	85.561.001



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

VALVE ASSEMBLY

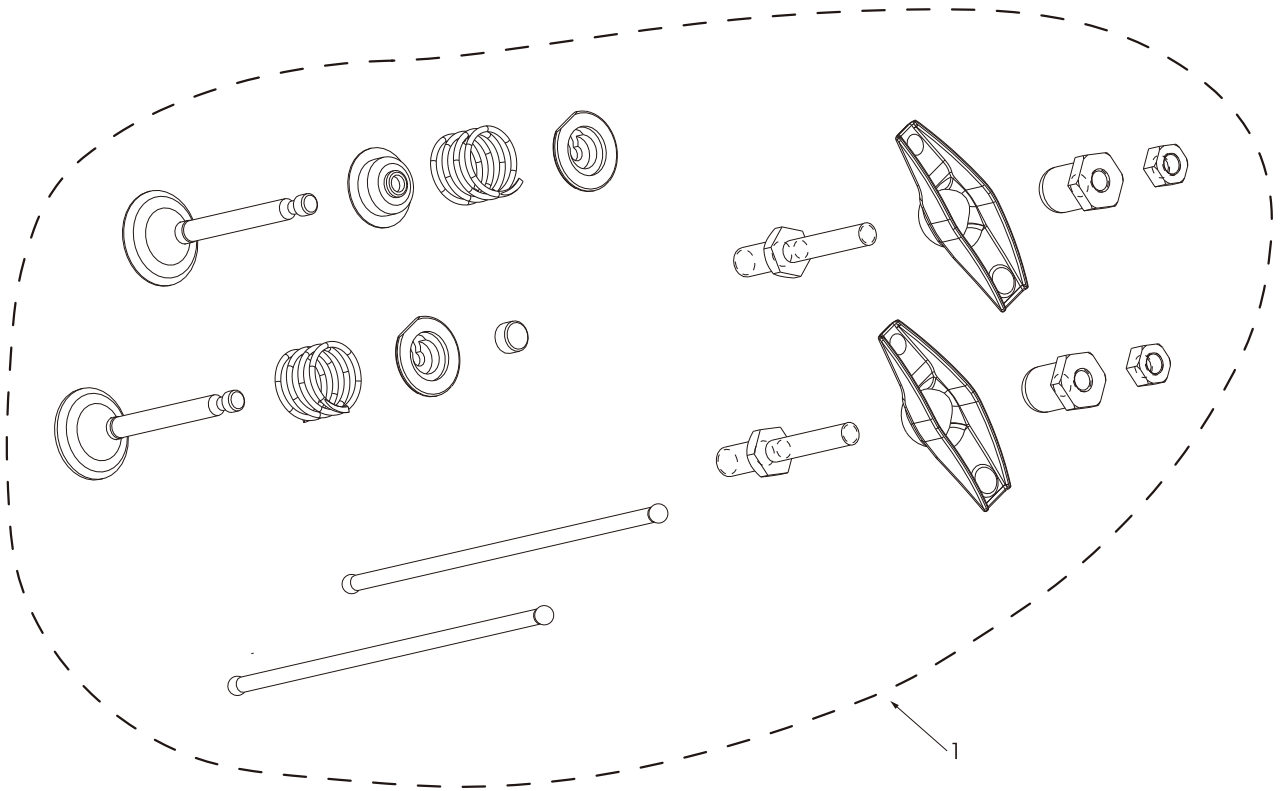


REF #	DESCRIPTION	QTY	BE PART #
1	VALVES ASSEMBLY	2	85.561.081



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

THROTTLE SPRING SET

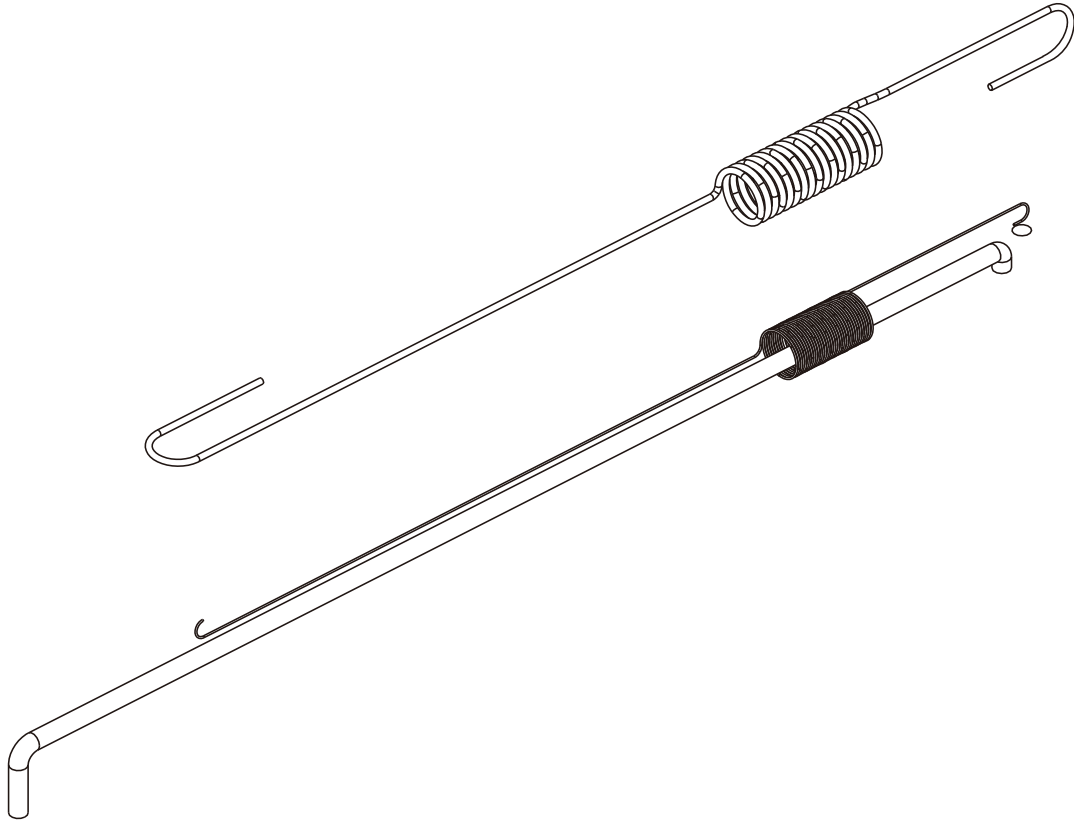


REF #	DESCRIPTION	QTY	BE PART #
1	ROD, SPRINGS, AND THROTTLE ADJUSTMENT	1	85.561.082



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

CARBURETOR ASSEMBLY

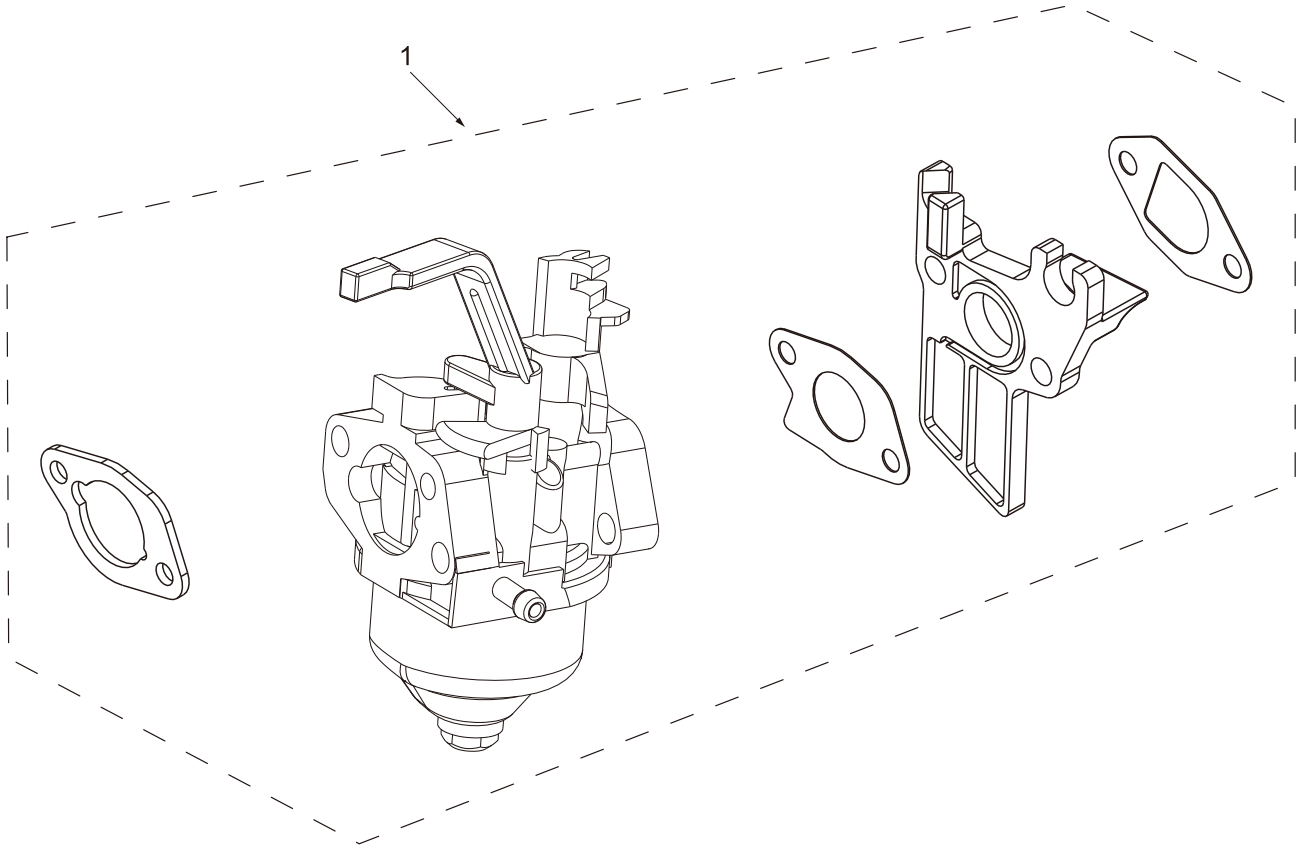


REF #	DESCRIPTION	QTY	BE PART #
1	CARBURETOR ASSEMBLY	1	85.561.002



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

AIR CLEANER

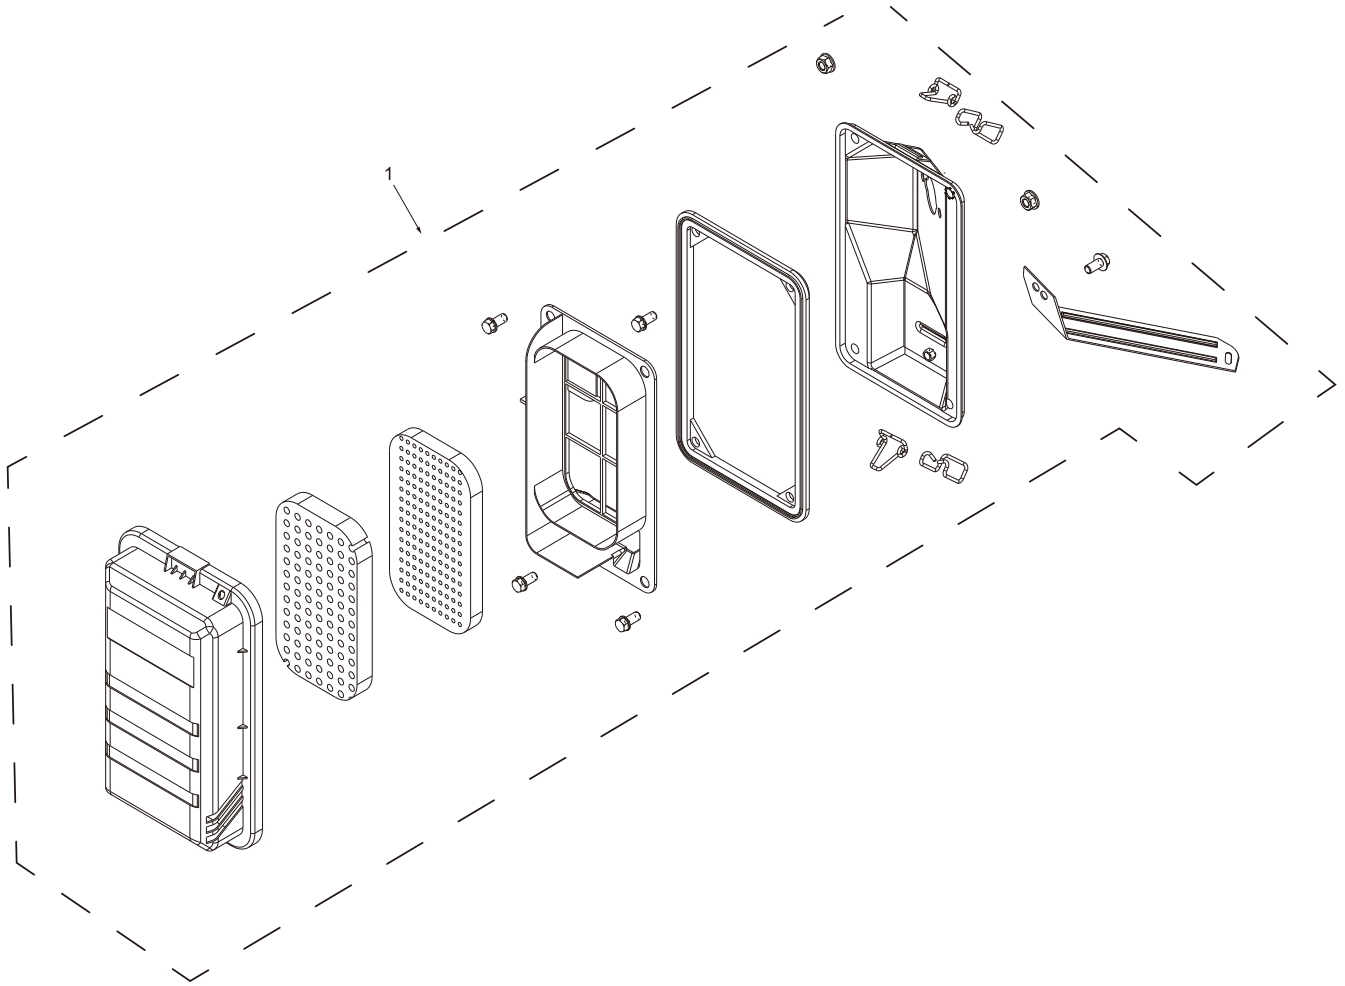


REF #	DESCRIPTION	QTY	BE PART #
1	AIR CLEANER ASSEMBLY	1	85.561.003



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

ALTERNATOR

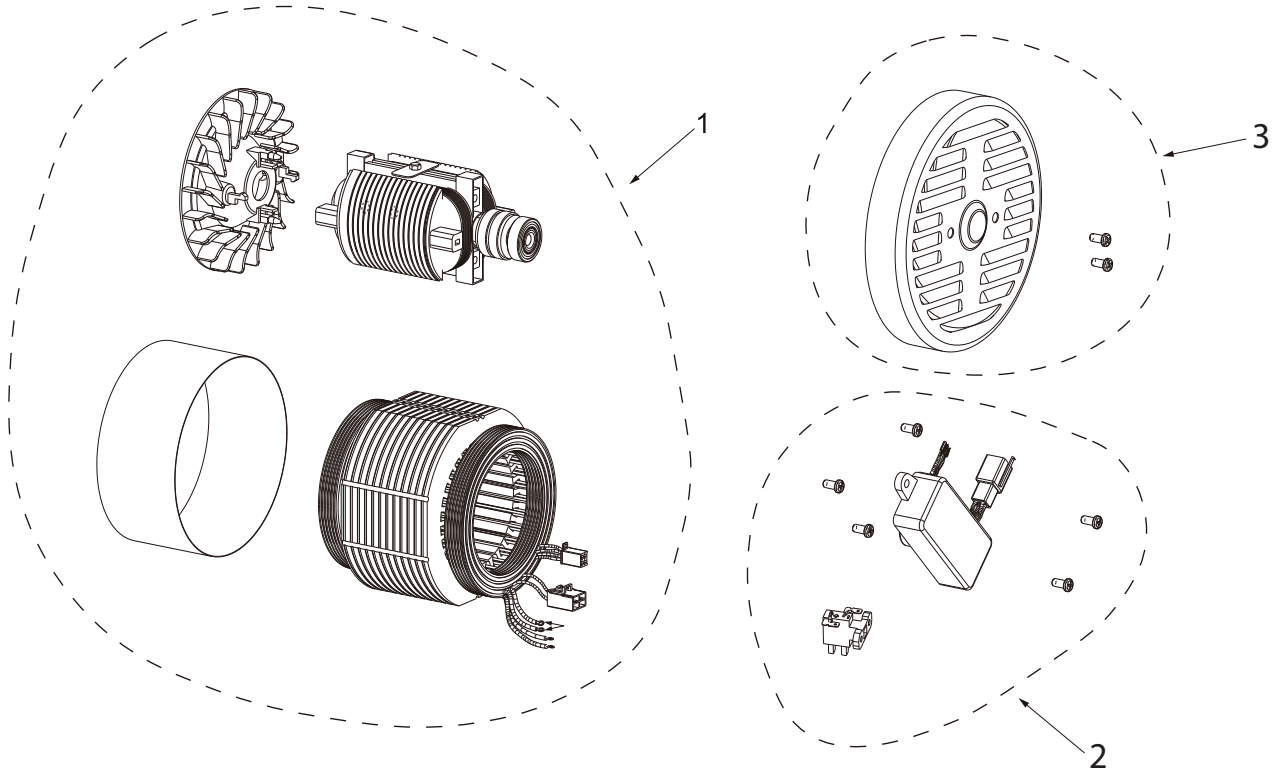


REF #	DESCRIPTION	QTY	BE PART #
1	ALTERNATOR ASSEMBLY	1	85.561.083
2	VOLTAGE REGULATOR WITH BRUSHES	1	85.561.004
3	ALTERNATOR TAIL COVER	1	85.561.084



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

FUEL TANK PARTS

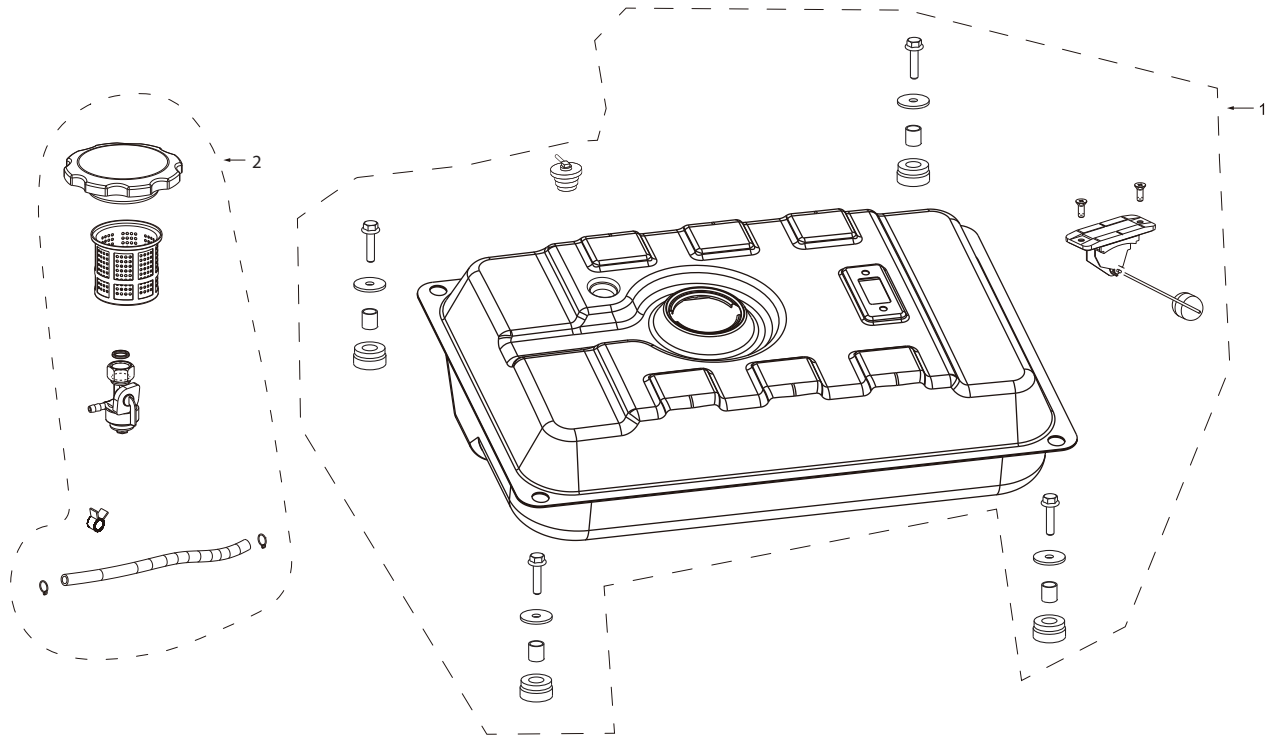


REF #	DESCRIPTION	QTY	BE PART #
1	FUEL TANK ASSEMBLY	1	85.561.012
2	FUEL CAP W/FILTER AND SHUTOFF	1	85.561.007



PARTS BREAKDOWN GENERATOR

MODEL:BE3800

CONTROL PANEL

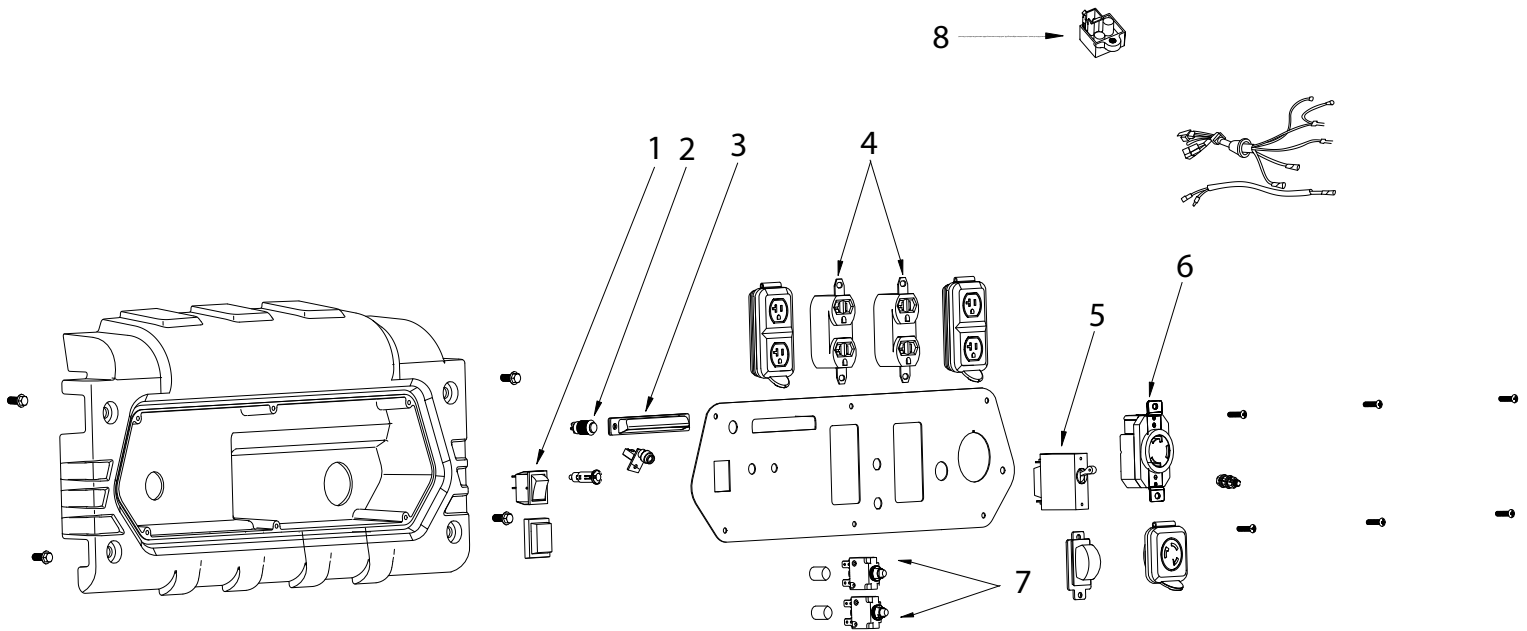

REF #	DESCRIPTION	QTY	BE PART #
1	ENGINE SWITCH	1	85.561.135
2	LED SWITCH	1	85.561.136
3	LED LIGHT	1	85.561.137
4	AC RECEPTACLE AC125V/20A	2	85.561.138
5	CIRCUIT BREAKER 1P-25A	1	85.561.139
6	AC RECEPTACLE AC125V/30A	1	85.561.140
7	PROTECTOR 20A	2	85.561.141
8	DC08	1	85.561.142

BE

POWER EQUIPMENT

If you need technical assistance call:

1-866-850-6662

(8:00am - 4:30pm PST, Mon - Fri)